Wander Control Systems, Inc.

How to Lock Out Unauthorized Code Changes ~ Platinum 3, Platinum 3B, & Sentry

Door Controller Connection Diagram
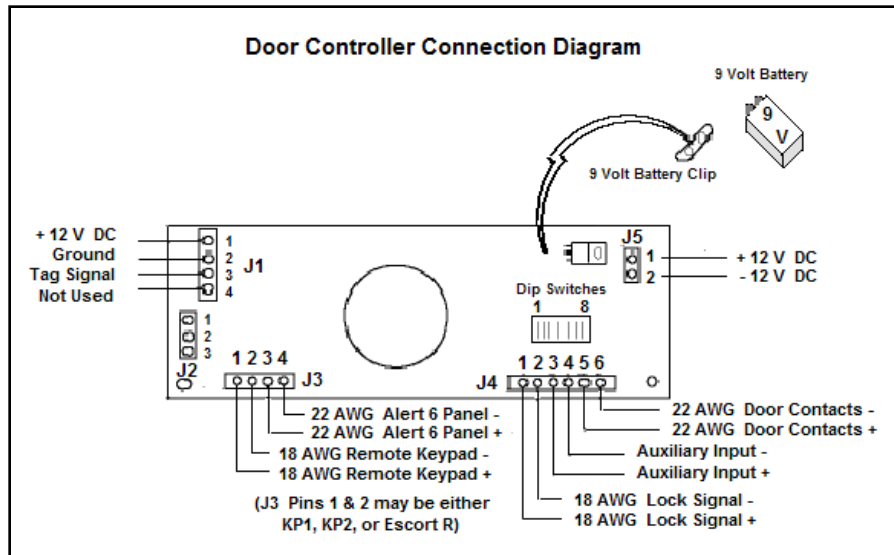
Procedure

1) Set all 9000 Codes on the door controller and optional keypad

2) Remove screws from the faceplate of the door controller to access the board pictured above

3) Once the 9000 codes are set as desired, turn Dip Switch 3 to the ON position

4) Remove the 9 volt battery

5) Remove the Power Connection for at least 10 seconds

6) Reconnect the Power Supply

7) Reinstall the 9 volt battery

8) Set the proper time using Code 9012

9) Install a short wire jumper on J4 – pins 3 & 4

10) Reposition the faceplate with screws onto the backbox

This procedure will prevent accidental, unauthorized, or malicious reprogramming of the '9000 Codes.' The escort codes and access codes will still function properly, but all programming codes known as '9000 Codes' will be disabled.

Please refer to Installation Manuals & Programming Guides for complete information about Platinum 3, Platinum 3B, and Sentry door controllers.

Wander Control Systems, Inc.

210 Richlandtown Pike ♦ Quakertown, PA 18951
Telephone 215-538-1983 ♦ After Hours 407-446-0055
www.wandercontrol.com